

Quick-Tap Wire Splicer Instructions


To make a Tap Splice:

1. Press the existing circuit wire into the outer channel.
2. Press the accessory (tap) wire into the inner channel until it touches the stop.
3. Fold cap and base together and close finger tight.
4. Complete the connection by locking the cap and base with pliers.



To make In-Line or Pigtail Splices:

1. Press one wire into the inner channel until it touches the stop.
2. Press the other wire into the opposite end (in-line) or same end (pigtail) of the outer channel. Be sure the end of the wire does not protrude outside the plastic housing.
3. Follow steps 3 and 4 for the tap splice to complete the connection.

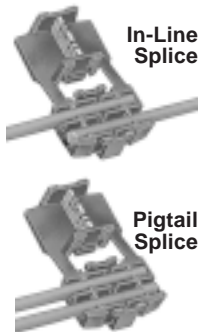

Cole Hersee Co.

20 Old Colony Avenue, Boston, MA 02127-2467
Tel: (617) 268-2100 • FAX: (617) 268-9490